



Mounting instructions of control desk for the T18MZ control

Our recommendation:

Use thread locking liquid to avoid loosening of the screws !


1. Fix the base plate to the two stands by the M4x12 screws. Make sure that the milled-out portion of the base plate is on the right side. The pre-assembled sleeves should each point to the outside and the bores with the M4 threads to the front. The round stand in the middle is fixed by an M3x8 screw (Ill. 1).
2. Now hook in the base plate to the control. First mount the carry handle of the control into the base plate and then push in the foot plate of the control into the milled-out portion (Ill.2).
3. The CFK distance support is screwed from the top to the round stand with the M3x8 screw. Tighten the screw so much that the sandwich plate is fixed tightly to the stand. Now the control should sit properly without moving. Before fixing make sure that the base plate is aligned centric to the control (same distance on the left and the right side – Ill. 3).
4. Now you can screw the distance support to the stands by means of the M4x8 screws (Ill. 3).

The remaining screws should only be tightened slightly for the moment, they will get properly fixed when the hand supports and the control have been adjusted to each other correctly.


5. Screw the CFK hand supports to the aluminium holders with the M3x8 screws (Ill.4).
6. Hook in the hand supports (aluminium holders) into the aluminium sleeves.
7. The distance between the CFK hand supports and the distance support allows adjustment of the hand supports. The smaller the distance, the lower the looseness (Ill. 5 and 6).
8. When all screws are fixed and the hand supports can get hooked in without problem, then assemble the holders.
9. Mount the holders in such a way that the CFK bearing plates point to each other. Screw the holders only to such an extent that you still can move them easily. Now screw together the carry handle with the bearing plates by using the supplied screws M4x10 (Ill. 7 and 8). Then you can fix the holders tightly to the control.

For more illustrations please check our homepage referring to T18MZ. www.mb-modelltechnik.com


We hope you will enjoy the control with the auxiliaries from mb-modelltechnik!

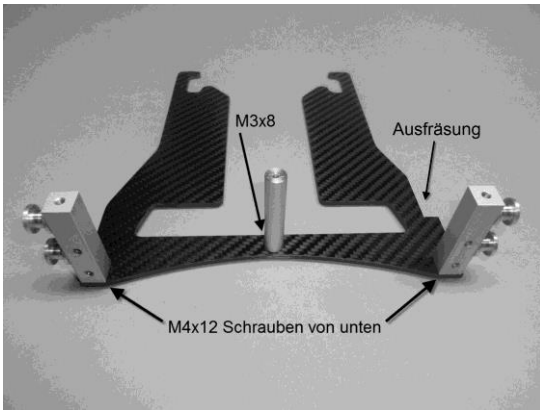


III. 1 M4x12 screws from below
Milled-out portion

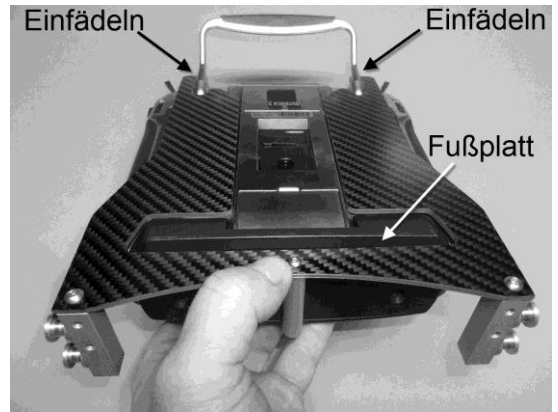

III. 2 mount mount
foot plate

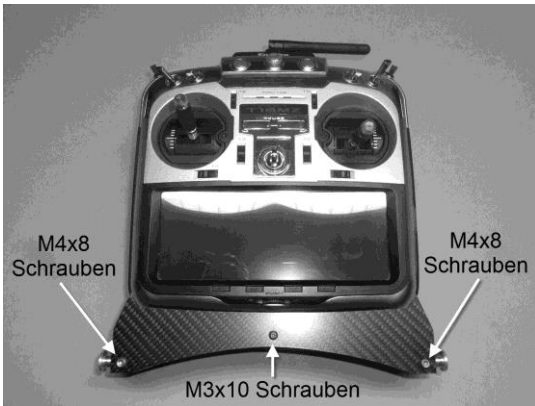


III. 3 screws

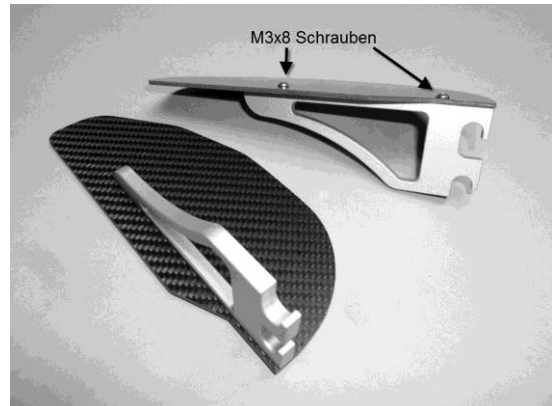


III. 4 screws




III. 5 distance ok

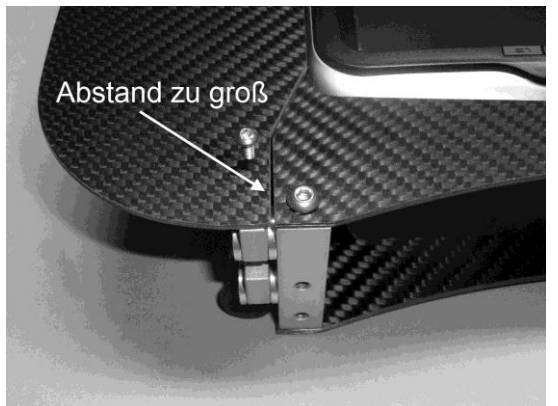

III. 6 distance too large

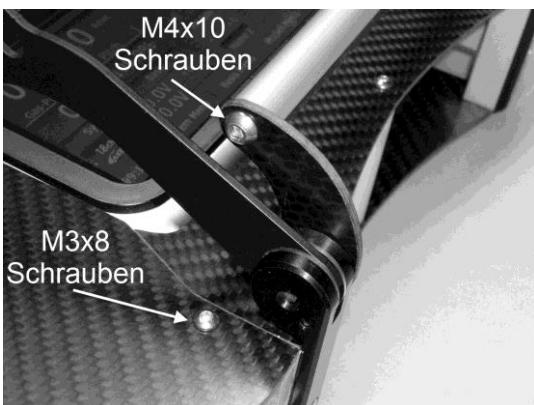

III. 7 screws

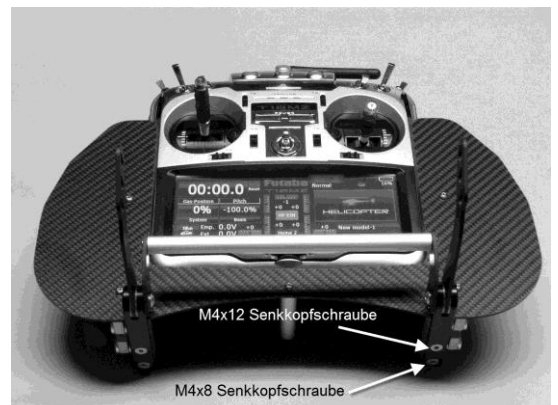

III. 8 countersunk screw